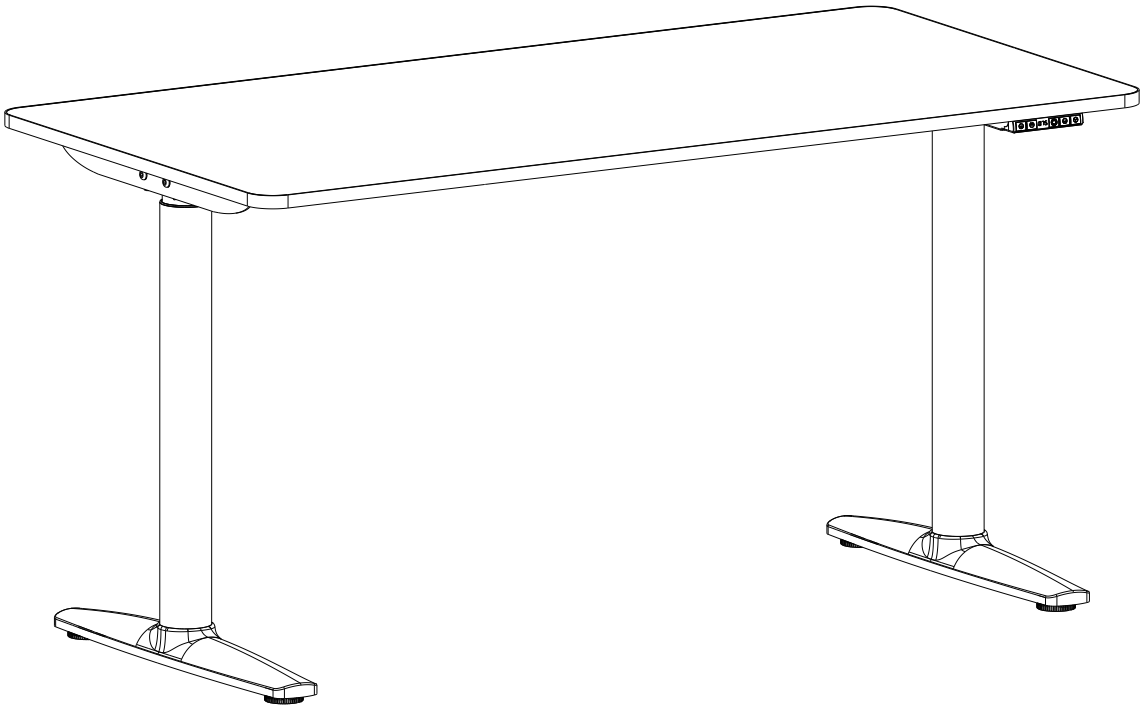

Two-person Assembly

TOOLS

HARDWARE

Ax37

Bx2

PARTS

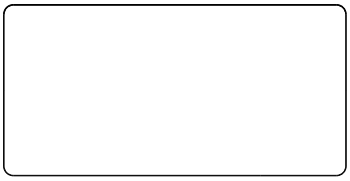

①X 1



②X 1



③X 2

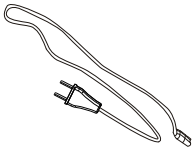

④X 1

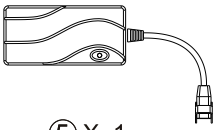

⑤X 1



⑥X 1

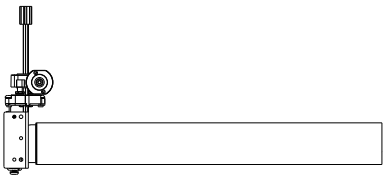

⑦X 1



⑧X2

⑨ X1



⑩ X1



⑪ X1

⑫ X1

⑬ X1

1

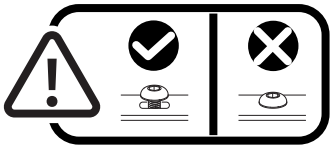

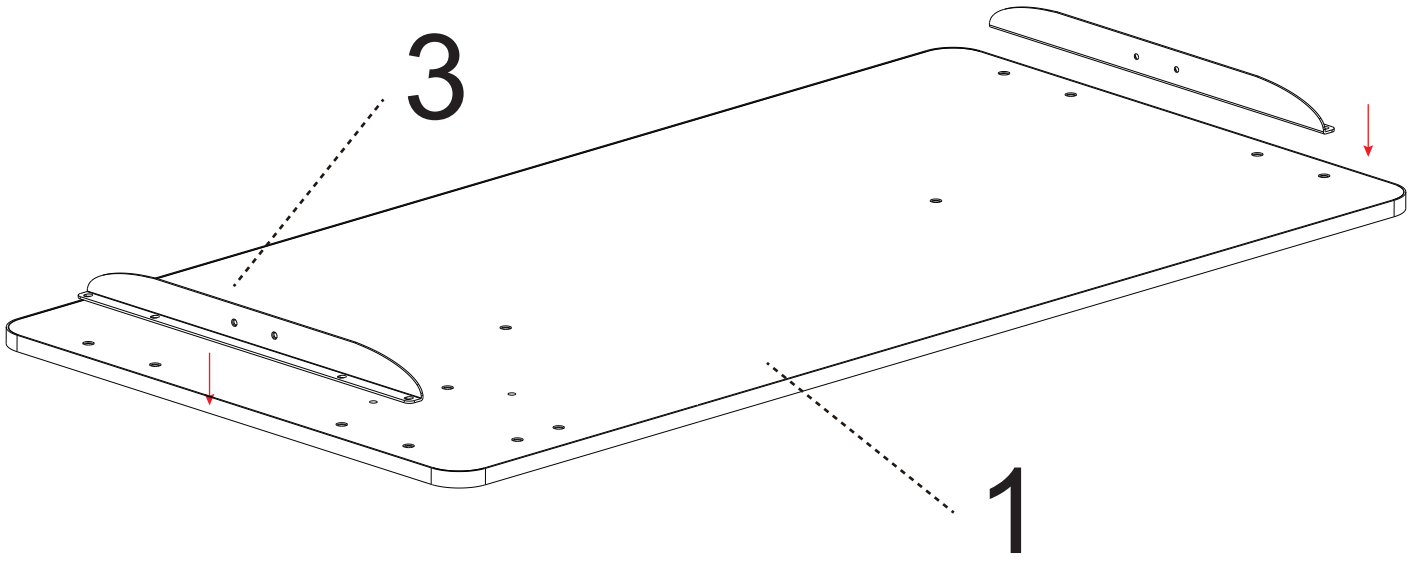

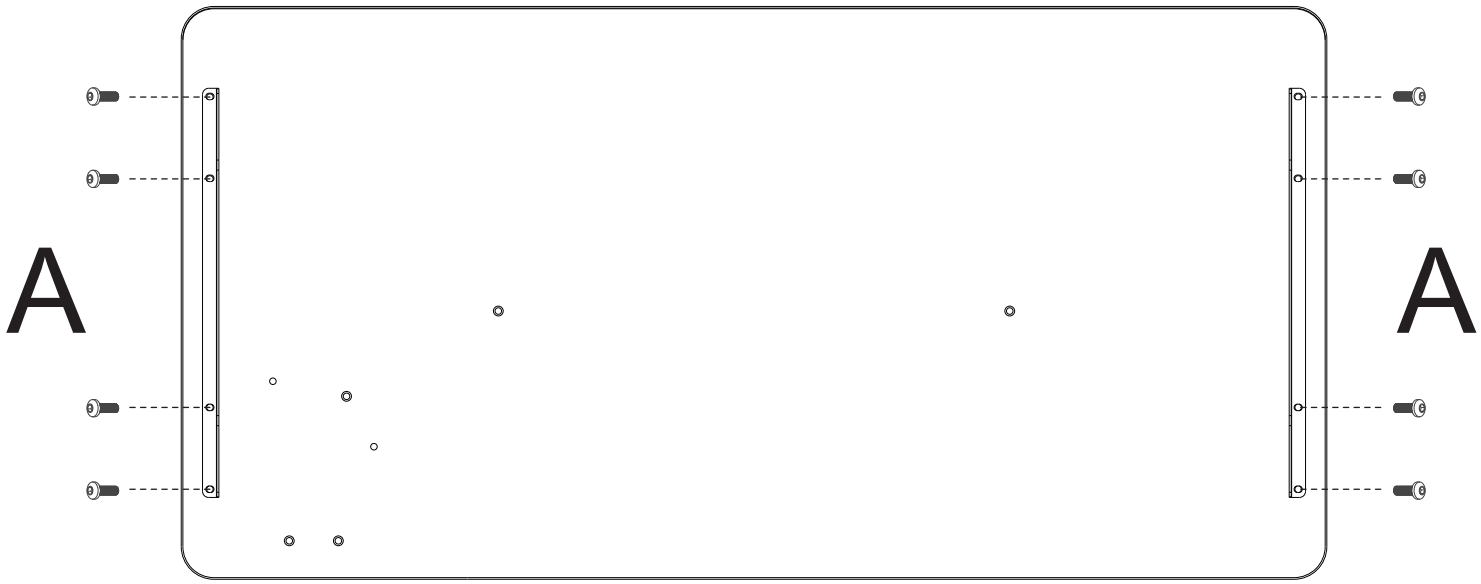

2

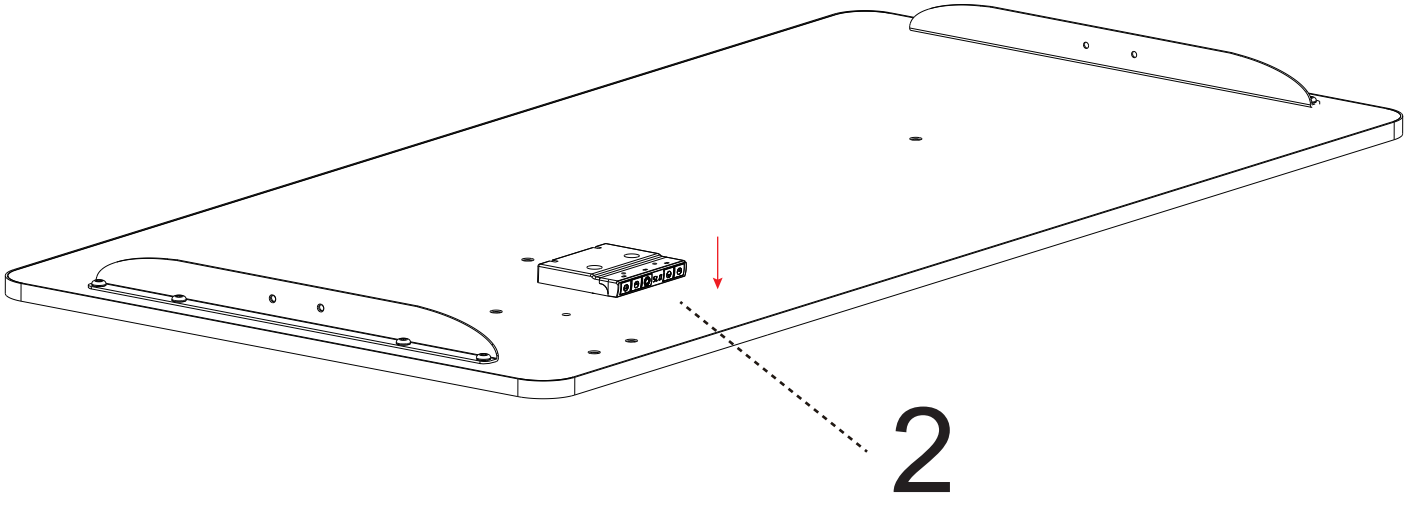

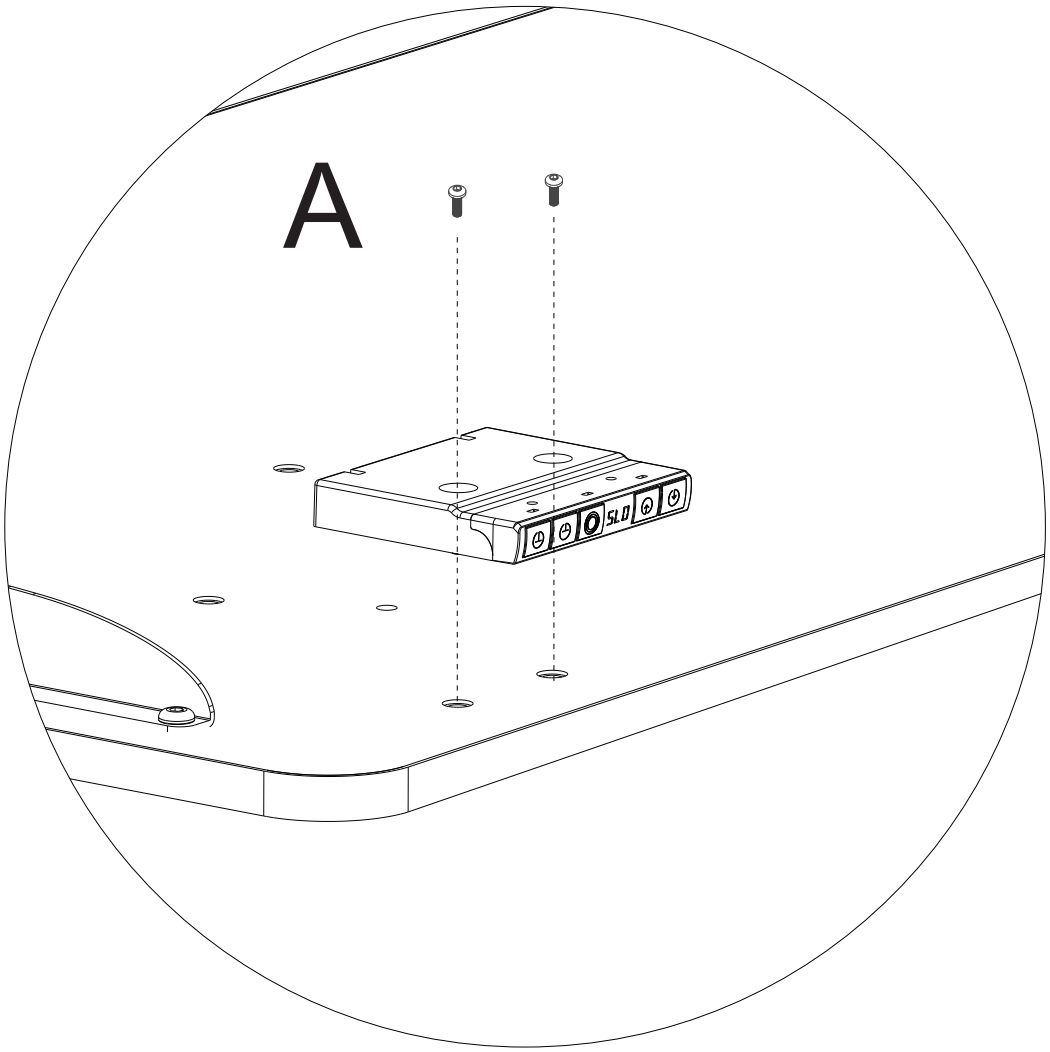

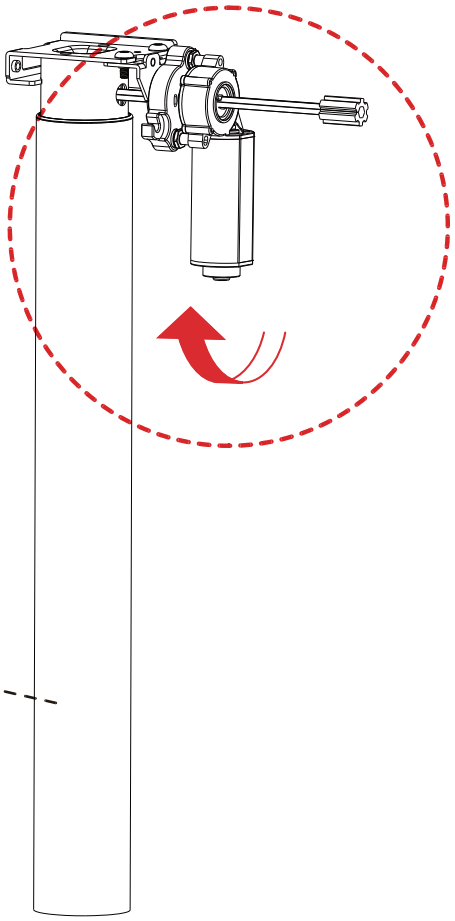

7

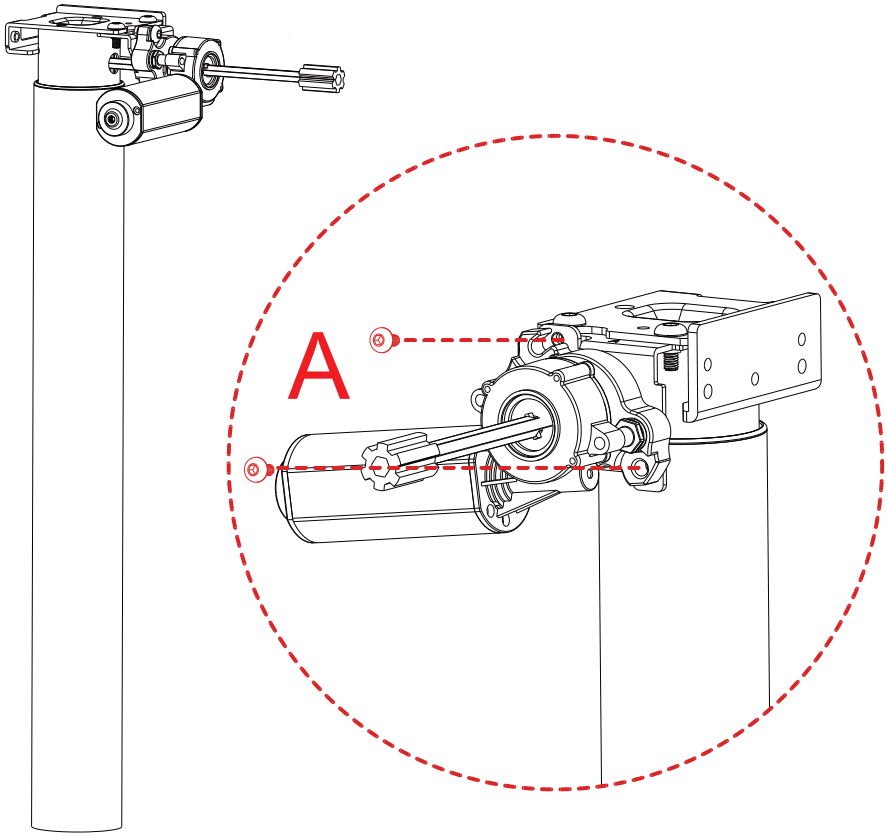

4

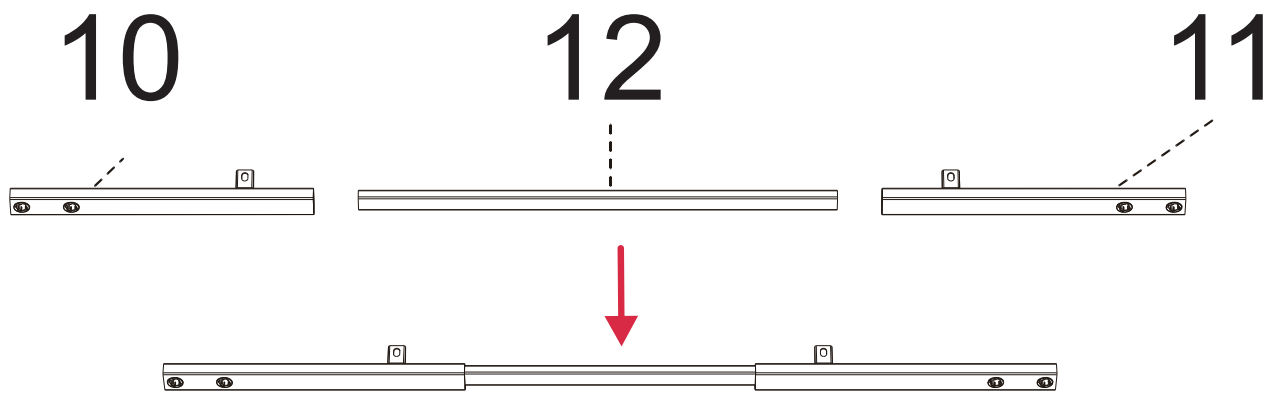

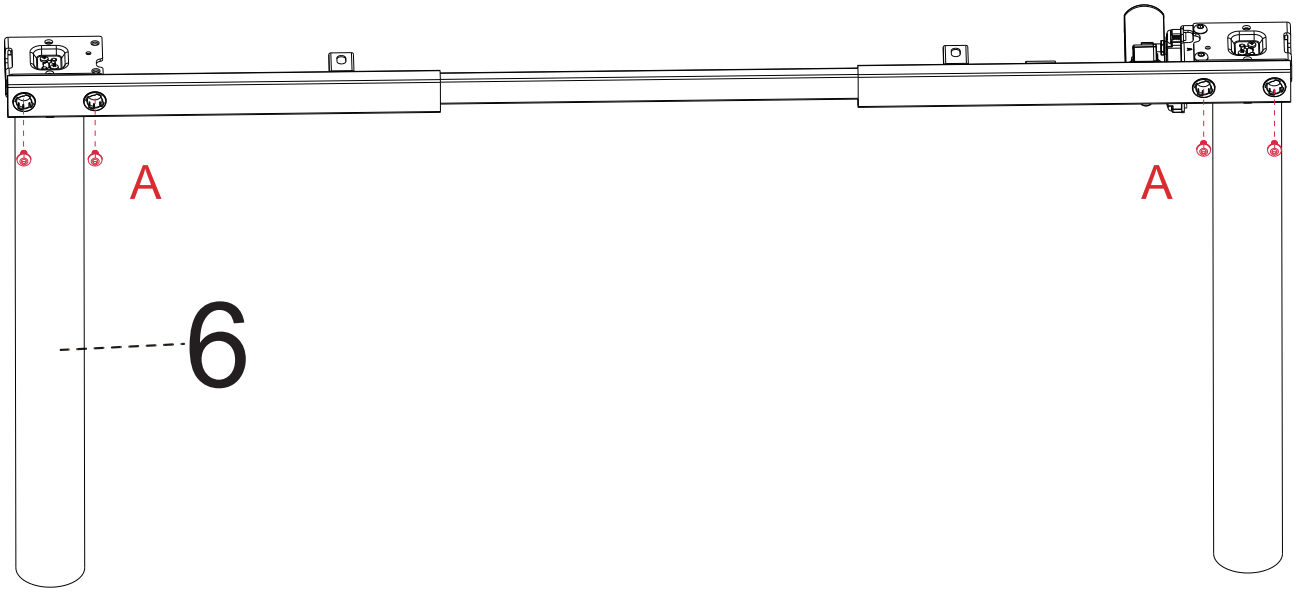

5

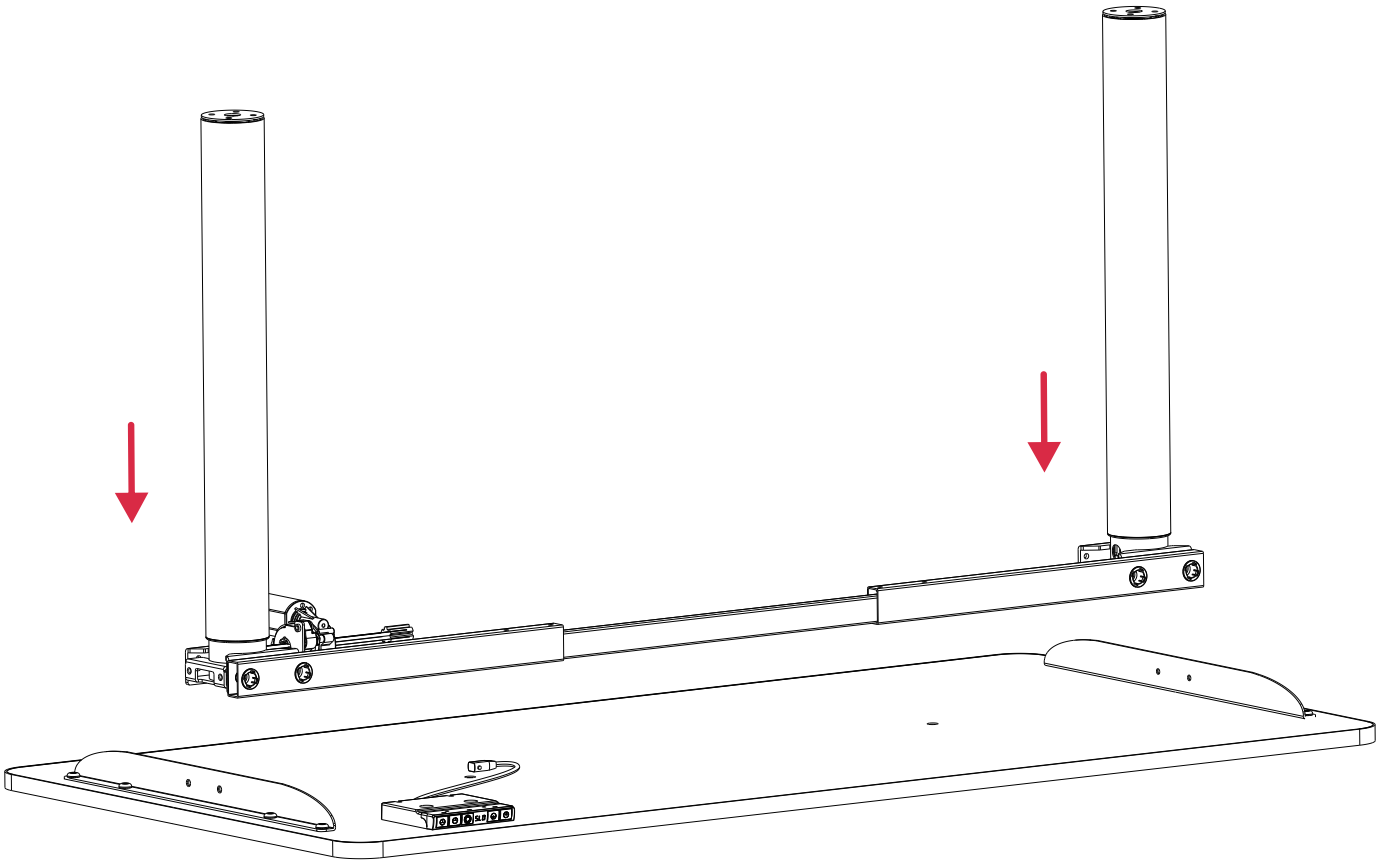

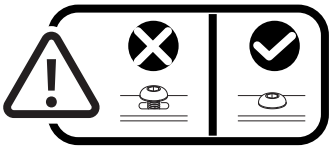

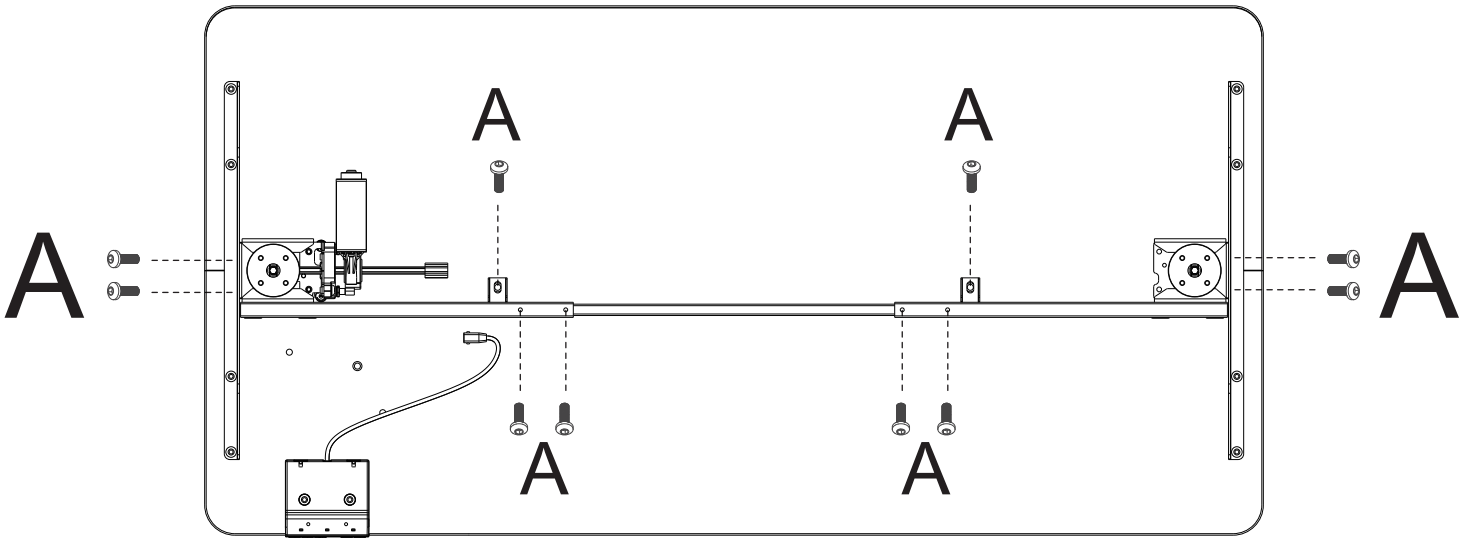

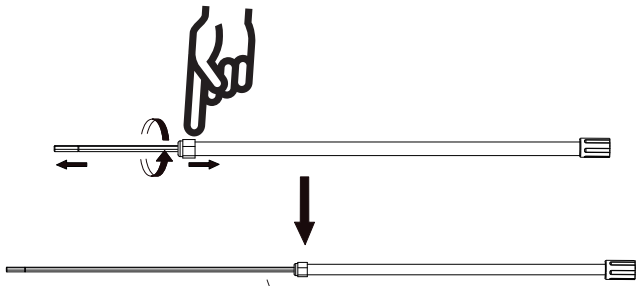

13

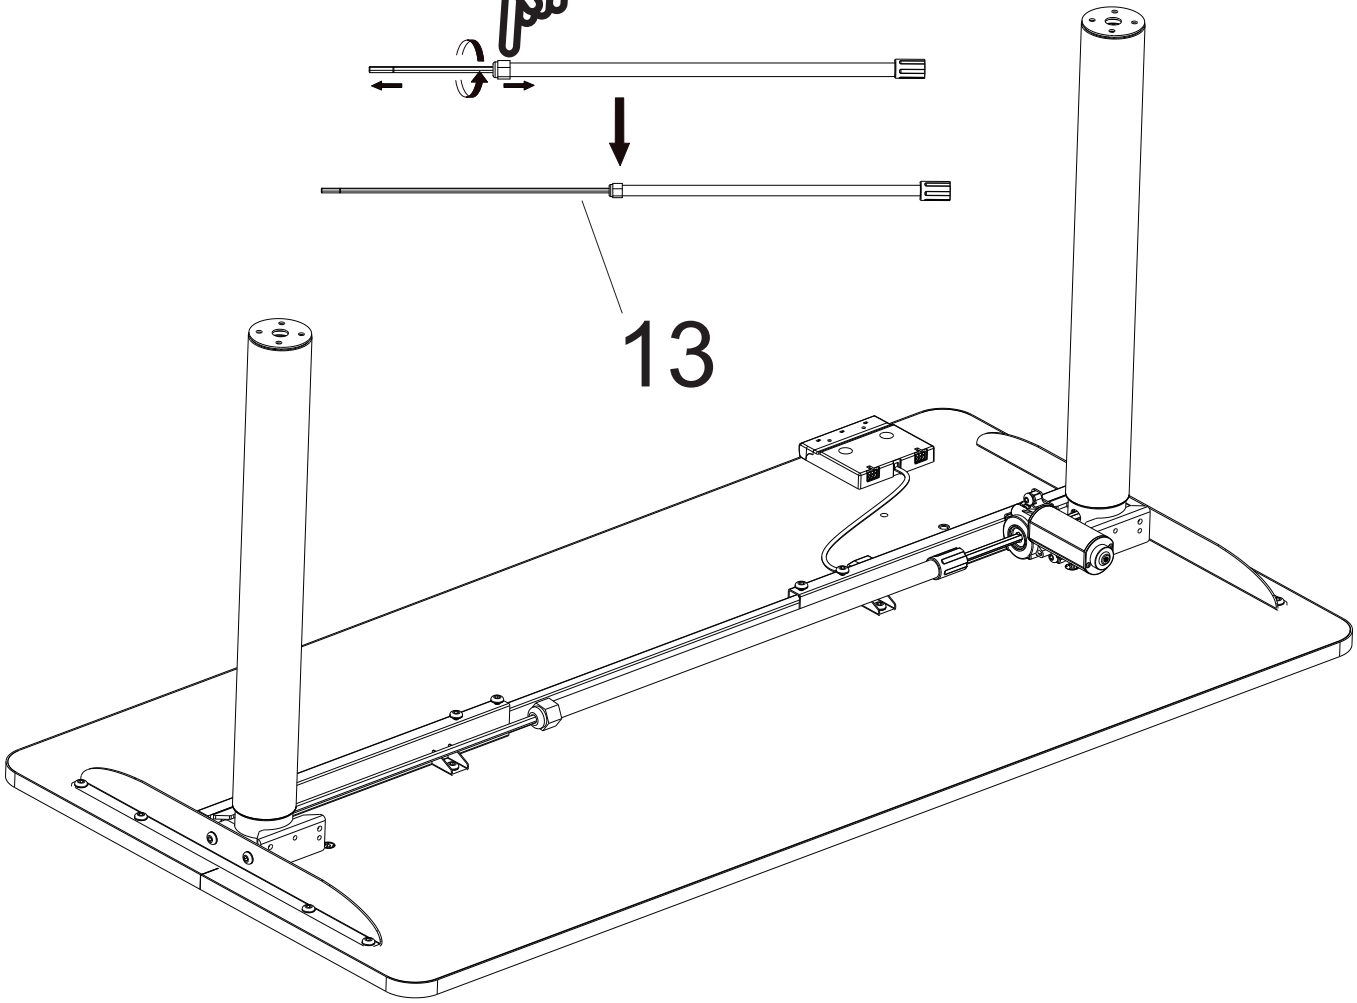

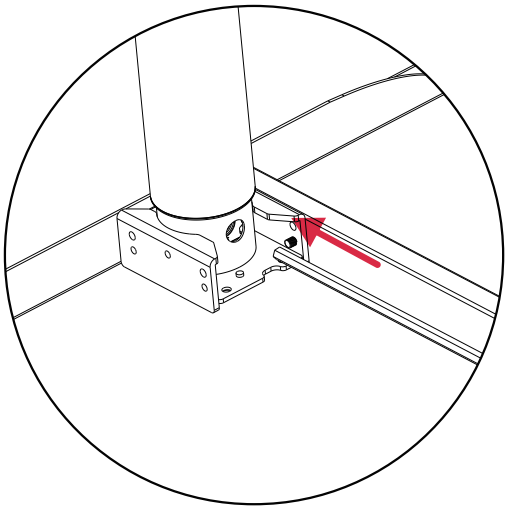

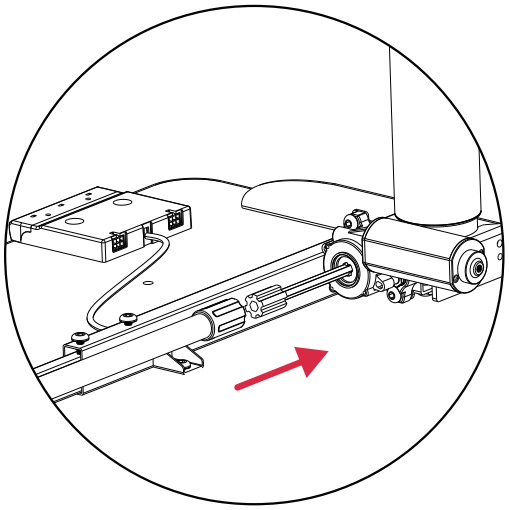

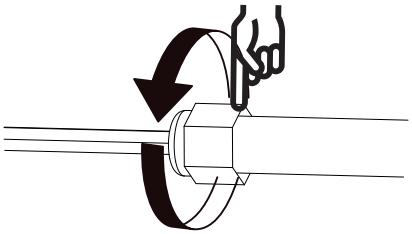

7

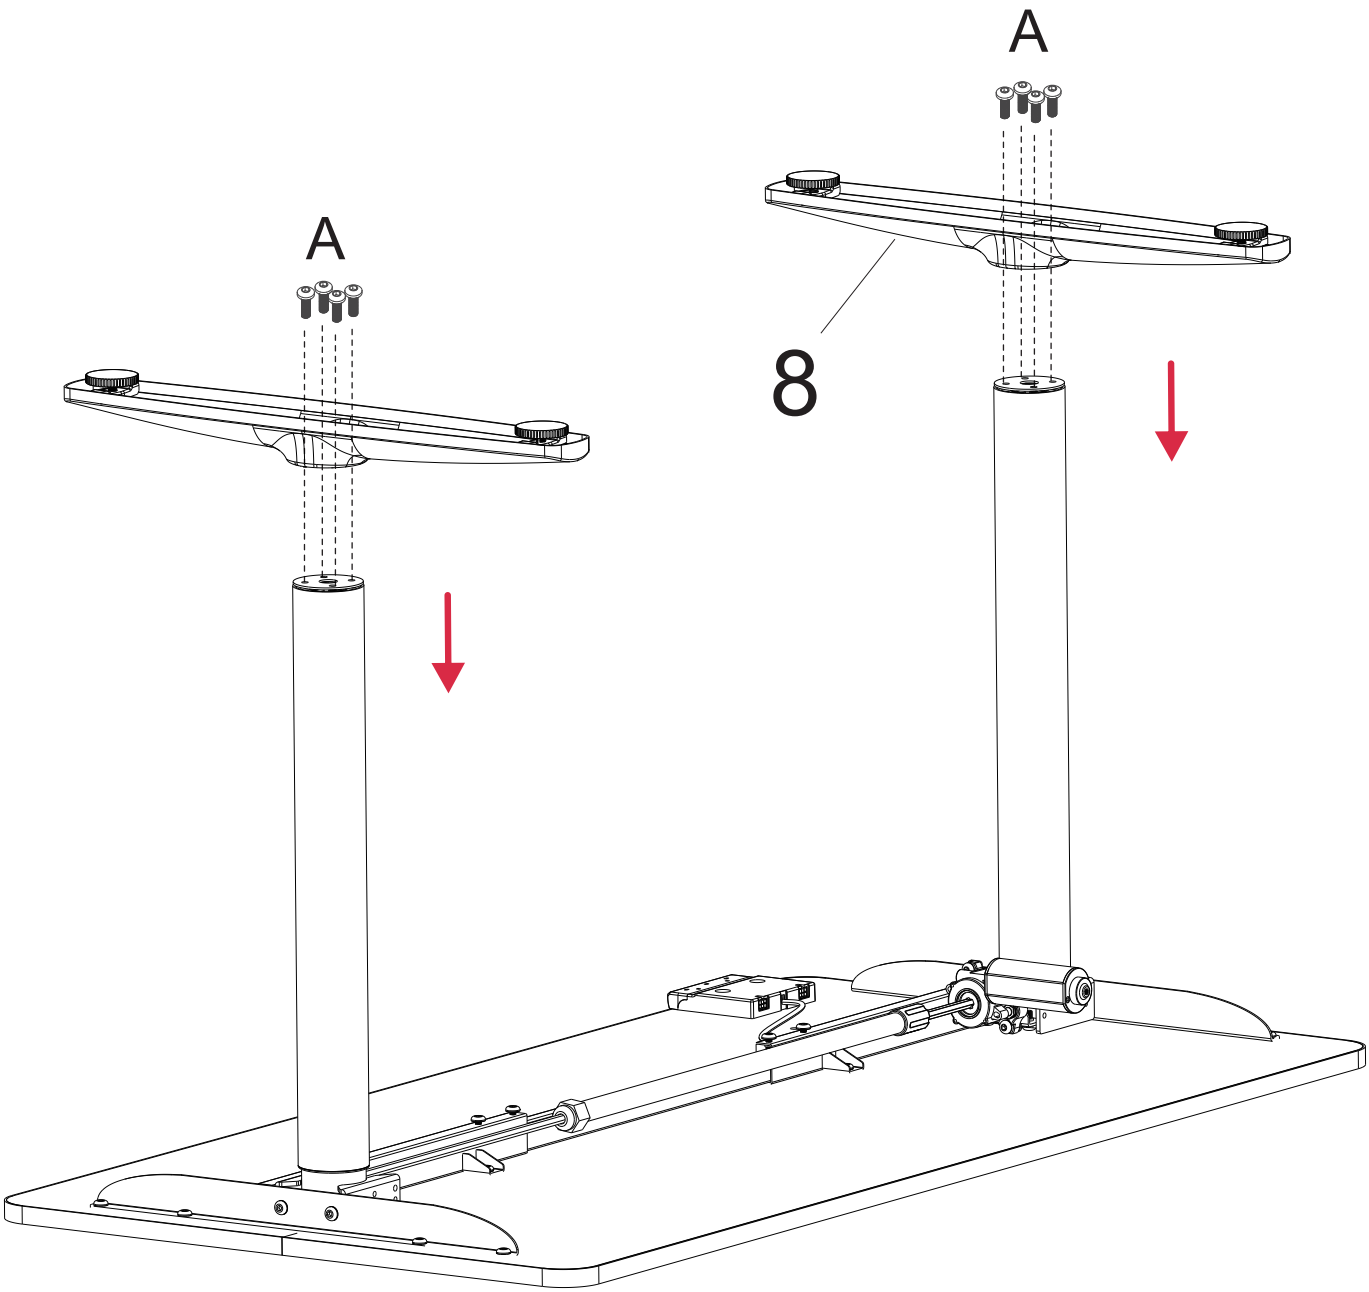

8

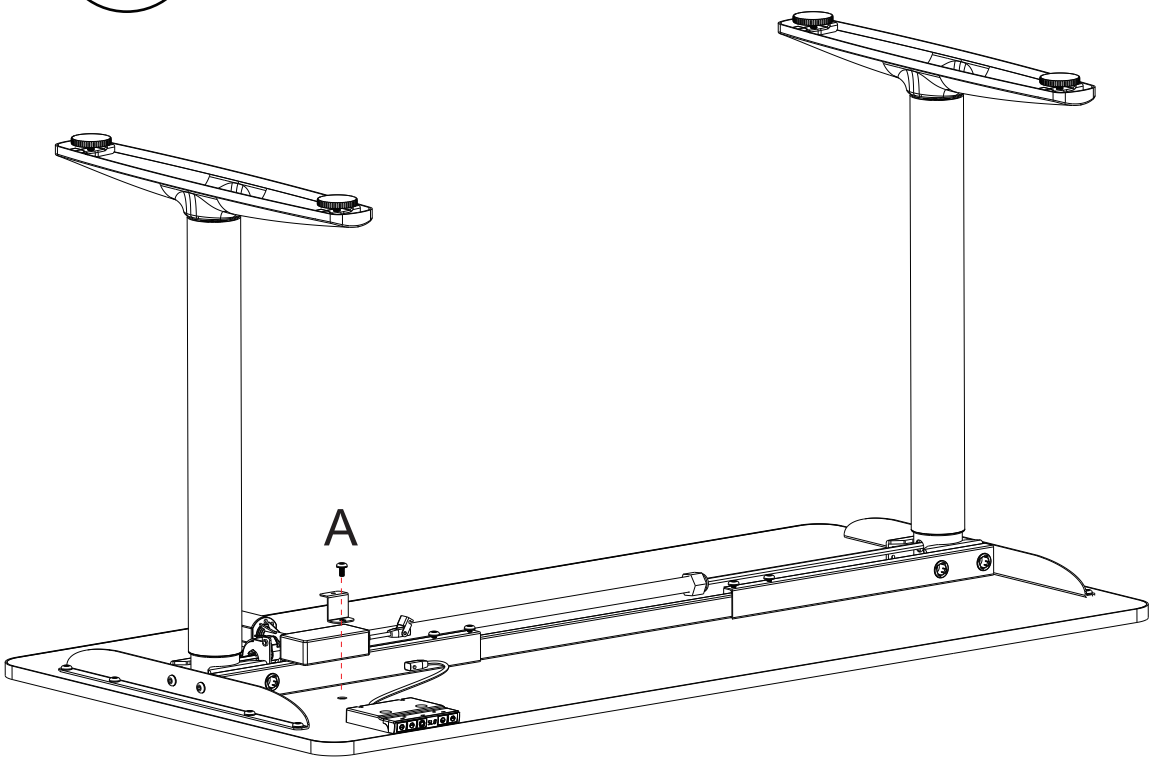

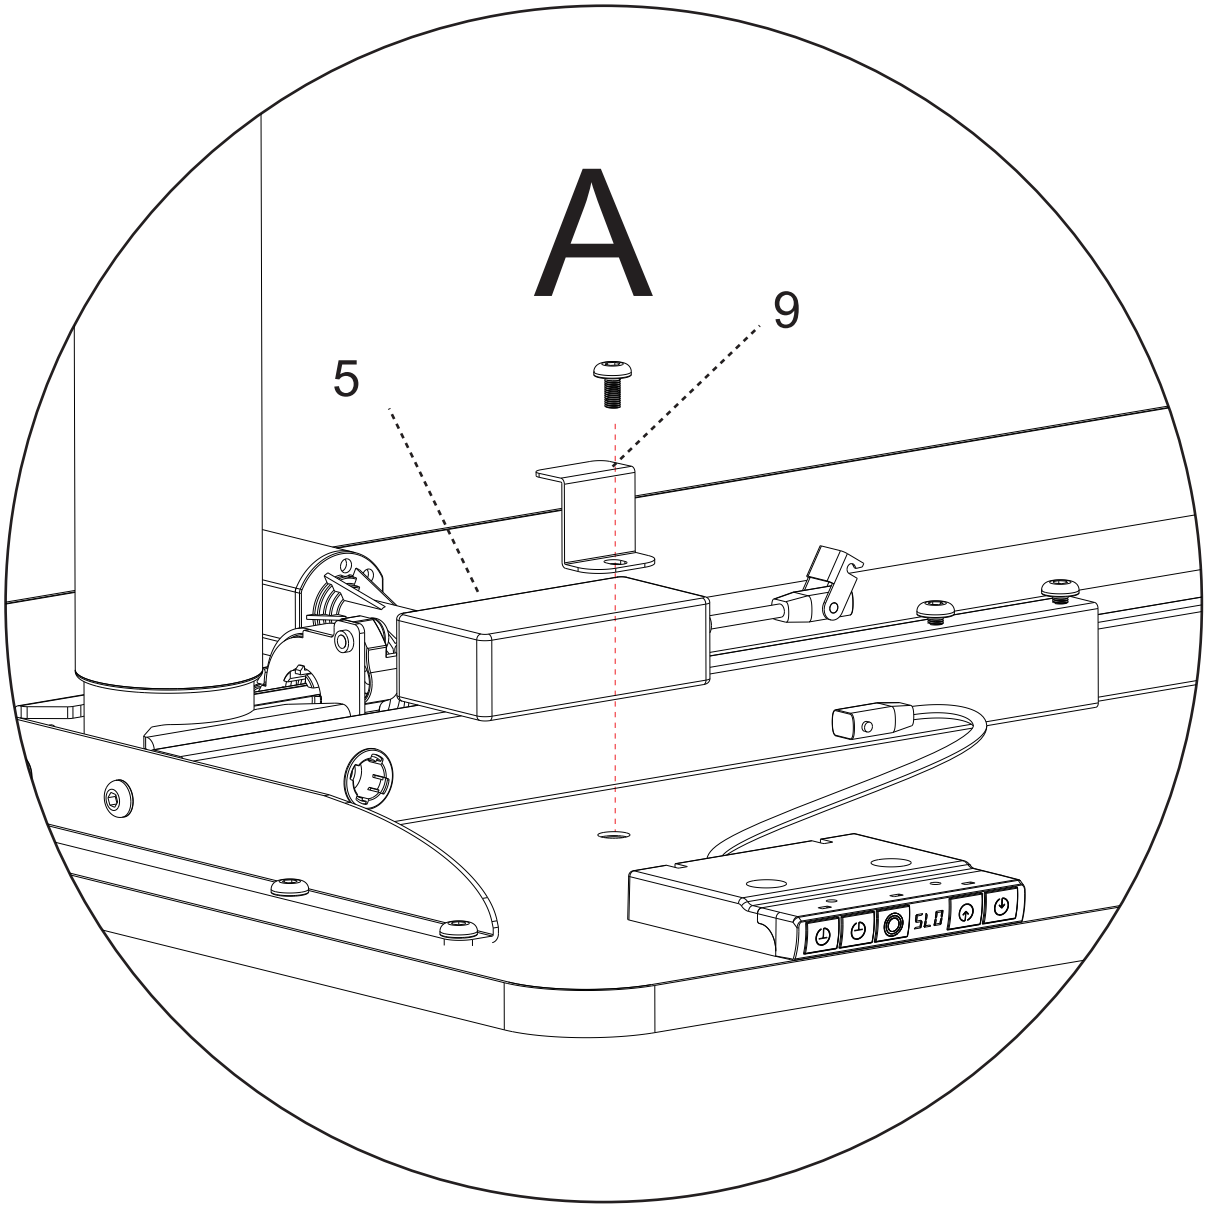

9

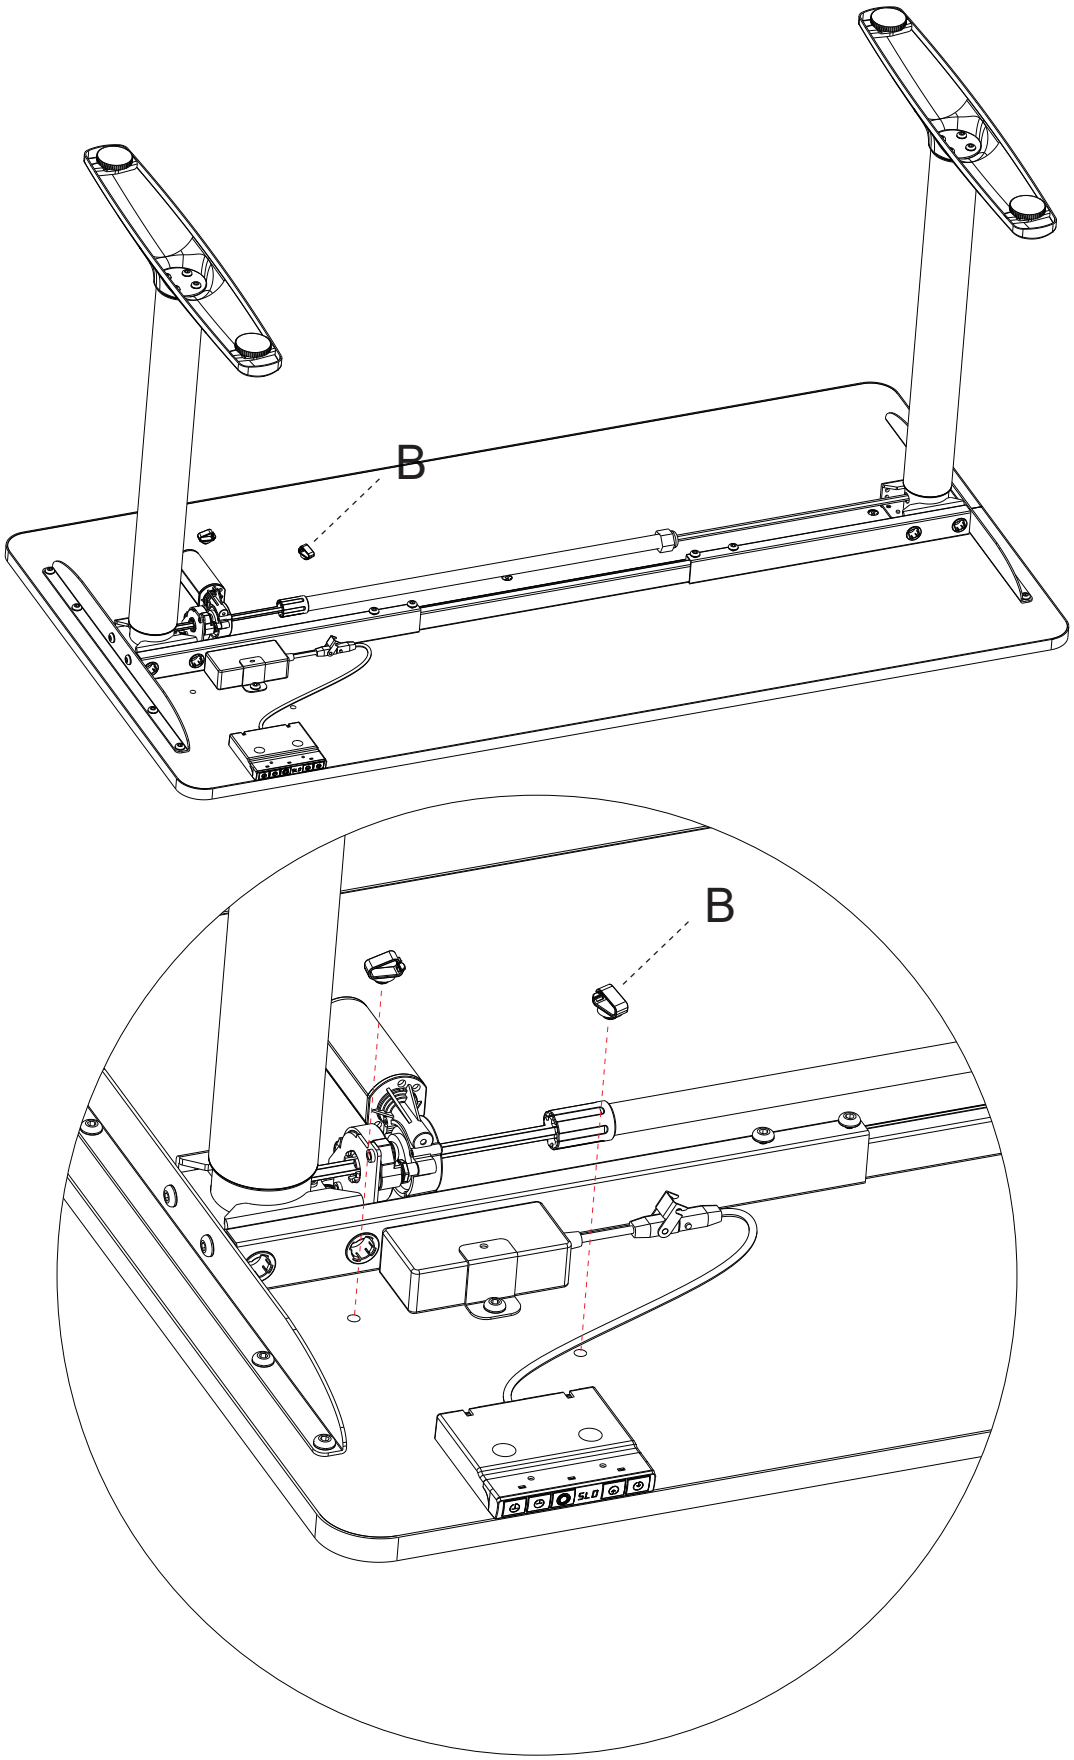

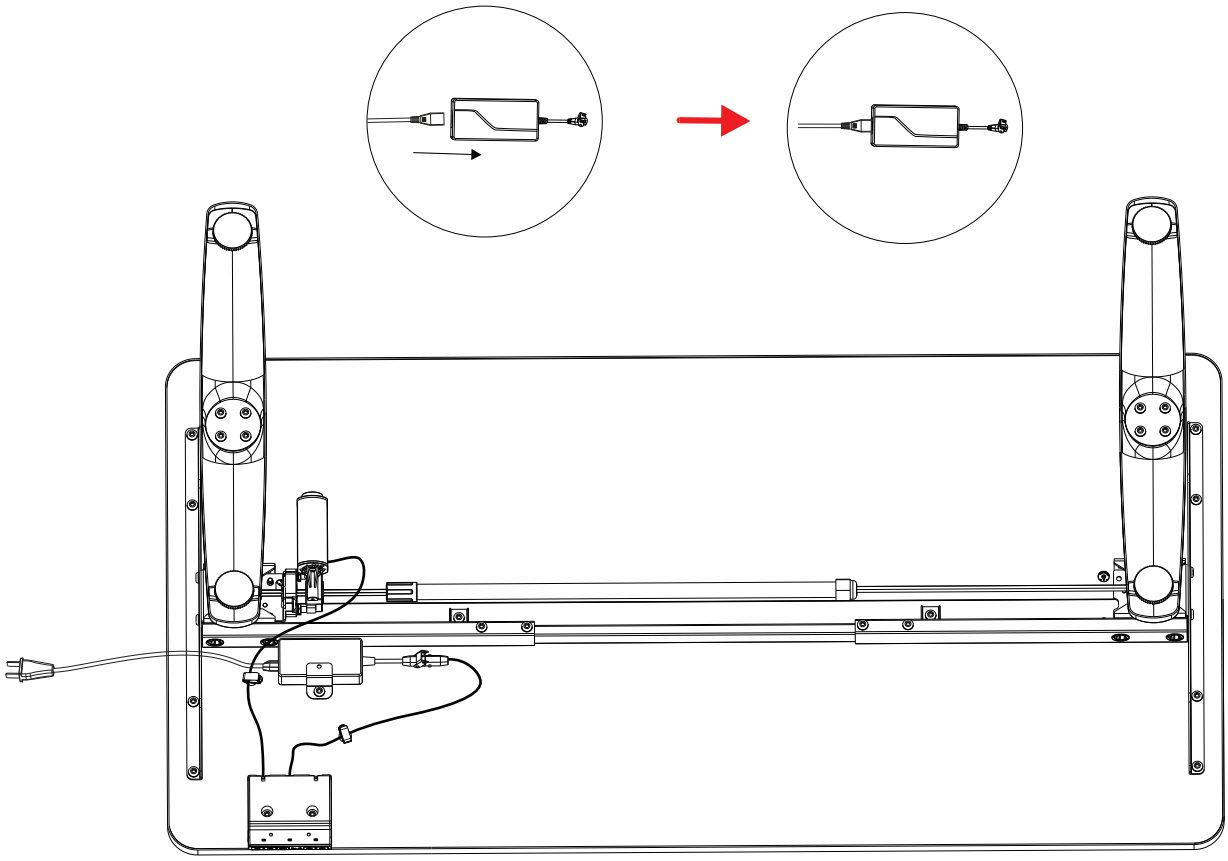

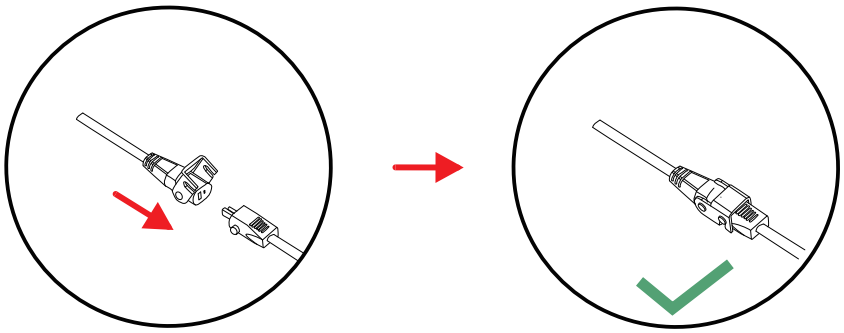

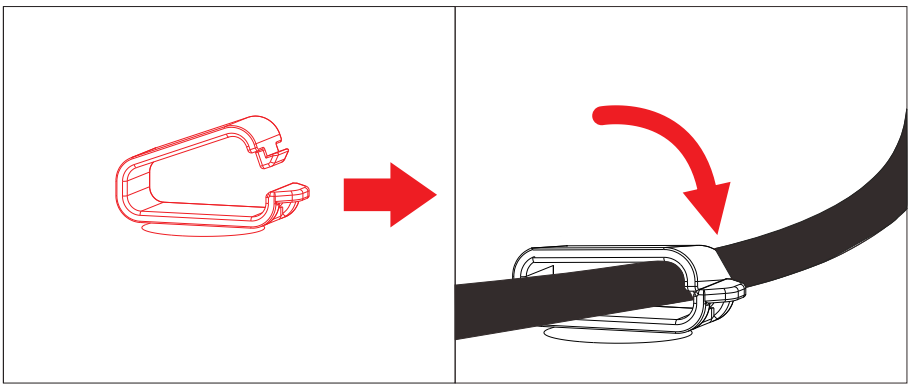

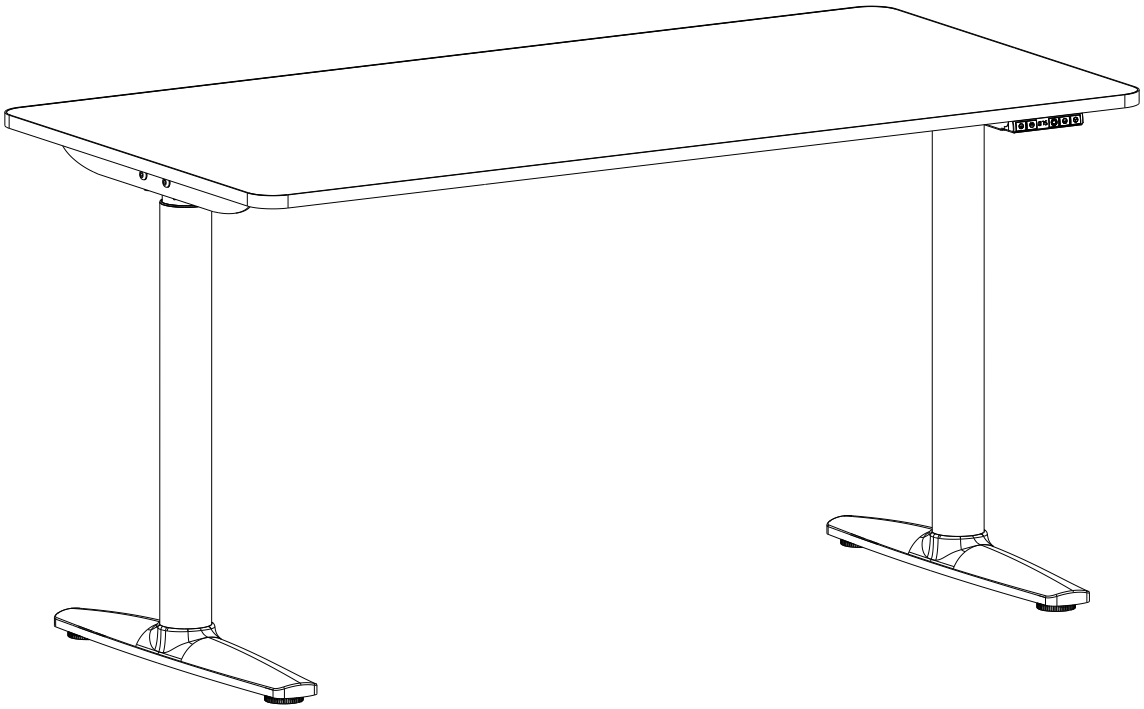

User guide

Raise/up

Lower/down

LED display

HSM

Sitting height memory position

Standing height memory position

Notice

While raising or lowering the table, please make sure objects are secure on the table, and nothing prevents the table from raising or lowering through its desired range of adjustment.

Suggestion

Please set the preferred table height while sitting by pushing the "sitting position memory key", and the preferred table height while standing by pushing "the standing height memory key".

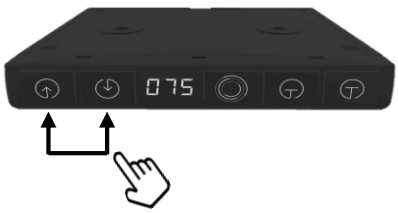

Table Height Adjustment

Press up ↑ or down ↓ to raise or lower the table to the preferred table height.

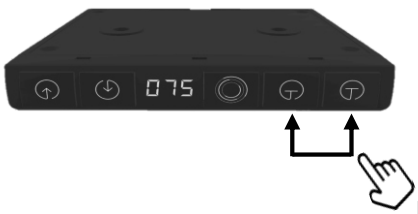

Memory Presets

At the preferred lower table height for seated work, press the left ↓ for 3+ seconds to set memory.

At the preferred higher table height for standing work, press the right ↑ for 3+ seconds to set memory.

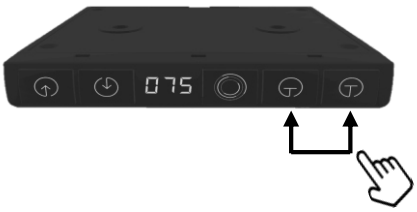

Use of Memory Keys

Briefly press the key left ↓ and release, the table will move to the preferred seated work height.

Briefly press the key right ↑ and release, the table will move to the preferred standing work height.

⚠ Table adjustment stops by pressing any key on the control pad

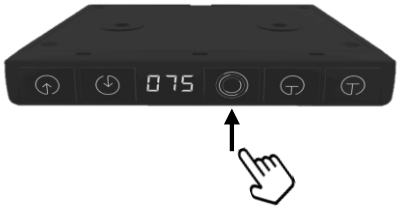

HSM mode

When the light is flashing, the table will slowly move up 12 cm in 3 minutes, will stop for 2 minutes, and then will slowly move down by 12 cm in 3 minutes. After 2 minutes the movements will repeat.

Power ON/OFF

1. Press the key to turn the operating system ON; the backlight light will be on;

2. The system automatically shuts OFF after 1 hours.

* If operating other keys, the backlight is off.

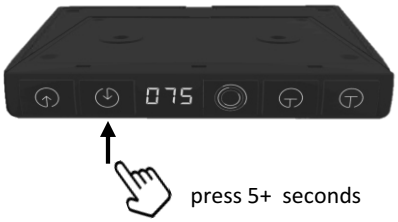

Reset control pad

In the lowest position or when prompted by the "protection and alarm" message, press the down arrow for 5+ seconds, the table moves all the way down and will raise to a preset height at which time the reset is completed.

Notice: Objects under the table should be removed before the reset operation to prevent damage to table or other items.

Protection and Alarm

⚠!
Be sure to disconnect the power cord from the power supply before servicing the desk!

Fault code	Fault phenomenon	Fault cause	Solution
E02	The table rises a little and then immediately falls a little distance or falls a little and then immediately rises a little distance.	During the movement of the table, the table is hit or the table is tilted.	Make sure there are no obstructions in the operating space of the lifting table.
Hot	The table cannot rise or fall after a period of time.	The lifting table is operated continuously for more than 2 minutes, triggering overheat protection.	Waiting for 18 minutes can be automatically removed.
E10	The table cannot be raised or lowered.	1. The motor connection is abnormal. 2. Motor is abnormal.	After power off, make sure the connection between motor and controller is reliable. Then power it on again and reset it.
E20	The table stopped rising and falling, and then it could only move in the other direction.	1. When the lifting table runs upward, it means that the weight on the table is overweight. 2. The lifting table is running down, which means falling and hitting the bottom.	1. Remove some heavy objects from the lifting table. 2. Hold down the down button for more than 5 seconds to reset.
E60	One side of the table is high and the other is low.	The height of the uprights on both sides of the lifting table is inconsistent.	After power off, make sure the connection between motor and controller is reliable. Then power it on again and reset it.
rES	The controller screen flashes "rES".	The lifting table needs to be reset.	After power off, make sure the connection between motor and controller is reliable. Then power it on again and reset it.
	Does it not match any of the above?		**Please contact the customer Service center.**